





Linear Bay Light Installation Instructions

Installation Instructions

WARNING

- Make sure the input voltage (120-277VAC or 347-480VAC) and the specification of fixture is consistent before installation.
- Thoroughly inspect the fixture for any freight damage.
- Disconnect power during installation and before servicing.
- Do not install on unstable objects.
- All work should be performed by a qualified electrician.
- If you do not understand these instructions, please consult your local distributor.


Ceiling Through Wire Rope Option

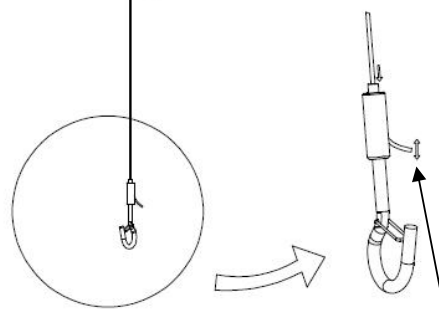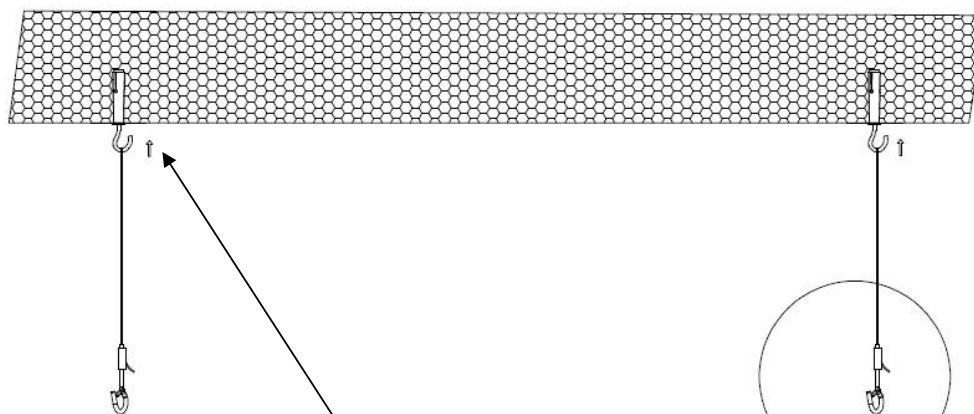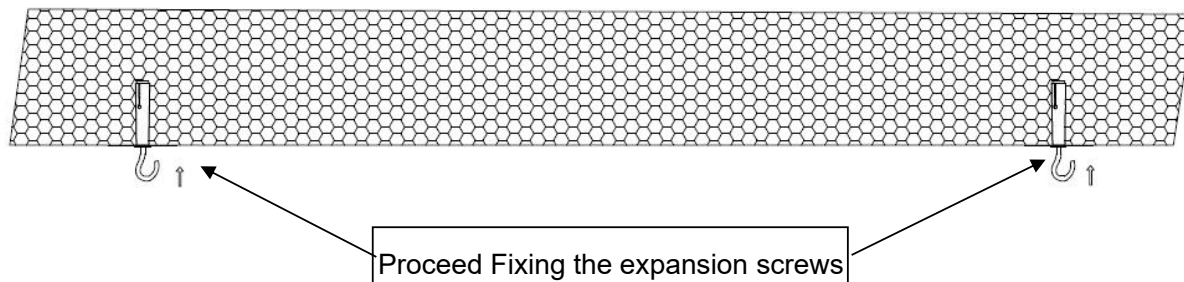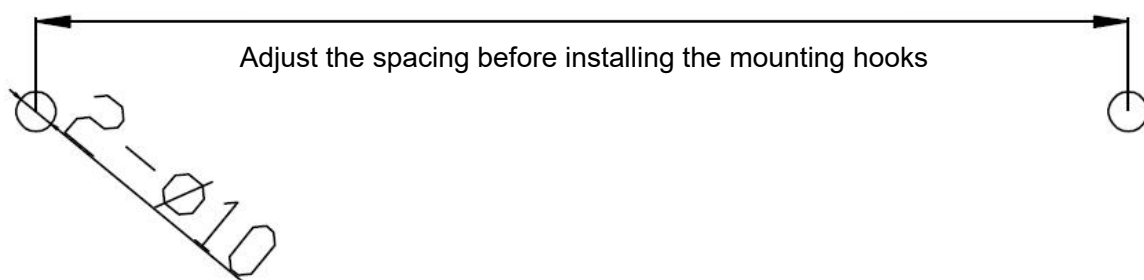

Linear Bay Light Installation Instructions

Installation Instructions

Press on the upper buttons to
adjust the height of the wire ropes.

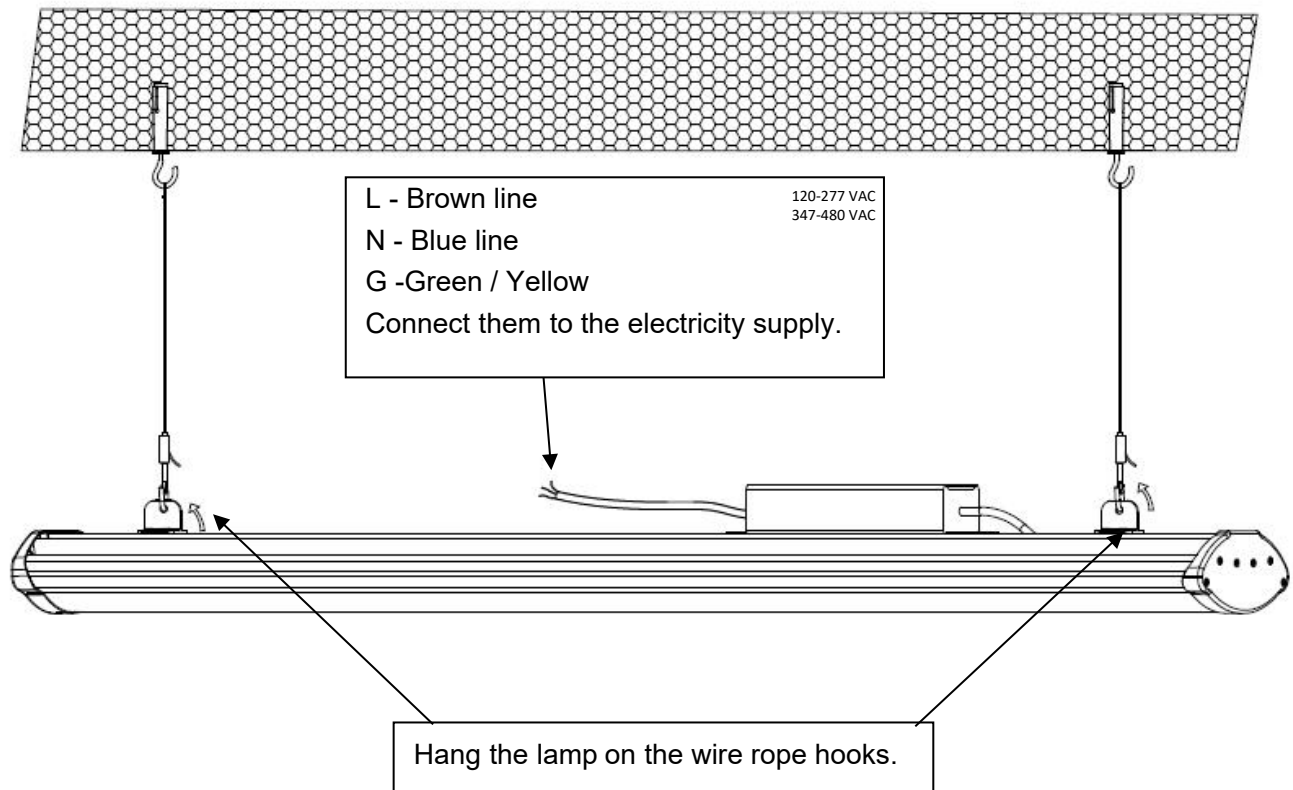

Bay Light Installation Instructions

WARNING

- Make sure the input voltage (120-277VAC or 347-480VAC) and the specification of fixture is consistent before installation.
- Thoroughly inspect the fixture for any freight damage.
- Disconnect power during installation and before servicing.
- Do not install on unstable objects.
- All work should be performed by a qualified electrician.
- If you do not understand these instructions, please consult your local distributor.

Surface mounting Installation

Adjust the spacing before installing the mounting hooks

